



Pistol Box Operating Instructions

Important Remarks

- For the purpose of security, please change the codes and install the safe prior to use.
- Please keep the codes in a safe place. Do not use personal data like birthdays, telephone numbers etc.
- Please keep emergency key in a safe place but not in the safe itself.

To Open the Gun Safe with the Key/ Battery Installation

- Pull out the key-hole cap (located below the key pad), insert the key and turn it clockwise, the lid opens automatically. In the open position, turn the key counter clockwise and pull it out.
- Take out the black plastic box in the safe, open the battery box cap and place 4 AA 1.5V batteries in the compartment and close.
- If the voltage of the batteries is deficient, when you press the keys there will be three beeps to inform you that you need to change them.

To Open the Safe with Personal Code

- Enter the personal code (pre-selected 168) and press #. The lid will open up automatically.
- Use * to delete the wrong input.
- If you input the wrong code 3X, the safe will go into lock out mode for 5 minutes. You must leave the batteries in throughout this time. Removing them will not take it out of lockout mode. It will not run its course without the batteries.

To Set Your Own Personal Code

- Press 0 0
 - Press the original code (168 to start), then #
 - Enter your new code, then #
 - Enter new code again, then #
 - You will here on beep to inform you that your code was changed correctly

Installation

- To remove the safe from the installing base: Open the safe, press the active pole (located in the inside front of the safe) and lift the front of the safe, then move it forward to depart the safe from the installing base.
- Use the four screws to install the base where you would like the safe.
- Install the safe onto the installing base: Let the two hooks on the base insert into the back of the safe, press the front of the safe downward until it clicks informing you the safe has been secured on the base.

