

AP8111 ELECTRONIC LOCK INSTRUCTIONS

USER'S MANUAL

OPENING THE DOOR

1). Enter valid digit code, then press # button.

-When the valid code entered, the lock will beep twice and the green LED turns on.

-When a invalid code entered, the lock will keep beeping and the yellow LED flashes.

2). Turn handle and pull door open

*There are two sets of user code. They have same function and equal authority.

1st user code --- Factory set to 168

2nd user code --- Factory set to 12345678

***WRONG TRY PENALTY** --- Entry of four (3) consecutive invalid codes starts a 15 min lock out. (During lock out, key pad will not respond to any operation.)

CHANGING THE 1ST USER CODE

ALWAYS PERFORM THE OPERATION WITH THE DOOR OPEN

1). Press the "reset" button, the lock will beep twice and the yellow LED turns on (The "reset" button is located on the back cover or the side frame (hinge side) of the door or inside the lower back cover of the door. Reset button is a red or green colored button.)

2). Enter your new digit code (1-8 digits), then press * button.

3). Test lock operation several times before closing the door

CHANGING THE 2ND USER CODE

ALWAYS PERFORM THE OPERATION WITH THE DOOR OPEN

1). Enter "00" on the keypad, and then press the "reset" button.

The lock will beep twice and the yellow LED turns on

2). Enter your new digit code (1-8 digits), then press * button.


3). Test lock operation several times before closing the door

CHANGING THE BATTERY

1). The red light LED indicates low battery

2). Remove the battery cover under the keypad housing.

3). Replace the battery (Please use 9V alkaline battery)

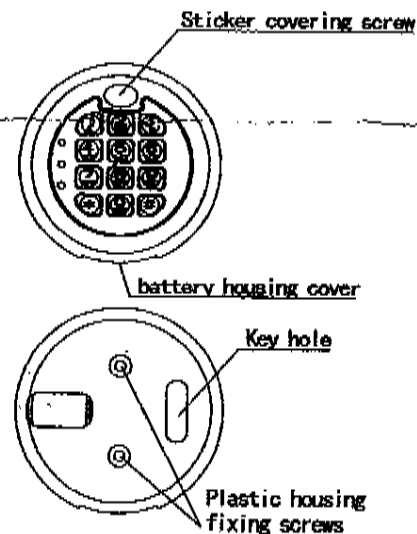

EMERGENCY OVERRIDE KEY

When you lost your code or the lock is out of order, you may use mechanical override key to open the safe as follows. (If you think lock is out of order, please try change battery first).

Please take off the sticker on the key pad and you can find the screw.

Unscrew it and take apart the key pad from the plastic housing.

1. For some models, you can see the key hole on the right side inside the plastic case. Input the key and turn the key and turn safe handle, the door will be opened. After open the door, please set the code and take out the key.

2. For some models, you can not see the key hole, then unscrew the two screws which holding plastic case to the safe. You will see the key hole after take off the plastic housing.

WARNING: DO NOT PLACE THE EMERGENCY KEY INSIDE THE SAFE. PUT THEM ASIDE IN THE OTHER SECURE PLACE